


SmallRig

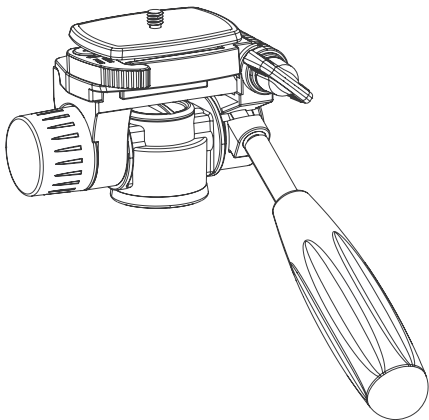

Gimbal of Encore Live-Streaming Stand

User Manual

In order to ensure user's safety and prevent the product damages caused by any improper use, please carefully read the "Warnings" below and properly keep this User Manual for future reference.

Foreword


Thank you for purchasing SmallRig's product.

Warnings

- Please read this User Manual carefully.
- Please keep the user manual properly, and be sure to attach this user manual when handing over the product to others.
- Please heed all warnings and follow all instructions in the owner's manual.
- Do not use the product in water because it is not dust or water proof.
- Do not let the product fall to the ground, be hit or suffer violent impact.

① 1/4"-20 Screw

④ Quick Release Plate

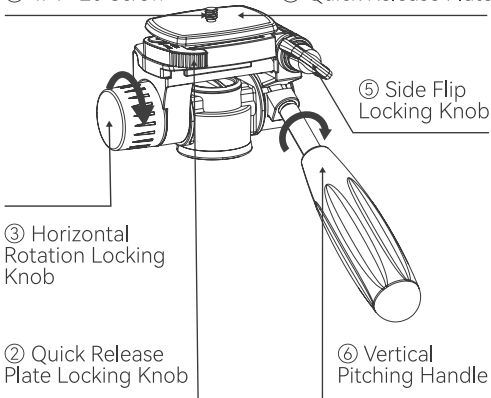

Instructions

Device Installation and Removal: Open the Quick Release Plate Locking Knob ② to the left and remove the Quick Release Plate ④. Align the threaded hole in the bottom of the camera or phone clip with the 1/4"-20 Screw ①, turn the D-type screw on the bottom of the quick release plate by hand until it is locked, then snap the quick release plate into the base bayonet, and lock the knob ② to secure the device.

Vertical Tilt: When used with a camera or fixed phone clip, if you need to turn the device to a fixed angle to shoot, release the Side Flip Locking Knob^⑤ counterclockwise, flip the gimbal base to an angle, and then rotate the lock knob clockwise until the device is fixed at that angle.

Horizontal rotation: rotate the Horizontal Rotation Locking Knob^③ counterclockwise can adjust the gimbal damping, and the head can be rotated horizontally 360°. Rotate clockwise to lock.

Pitch Forward and Backward: to adjust the front and rear pitch angles, rotate the Handle^⑥ counterclockwise, push the gimbal to the desired angle, and rotate the handle clockwise until the device is fixed at that angle.