


SmallRig

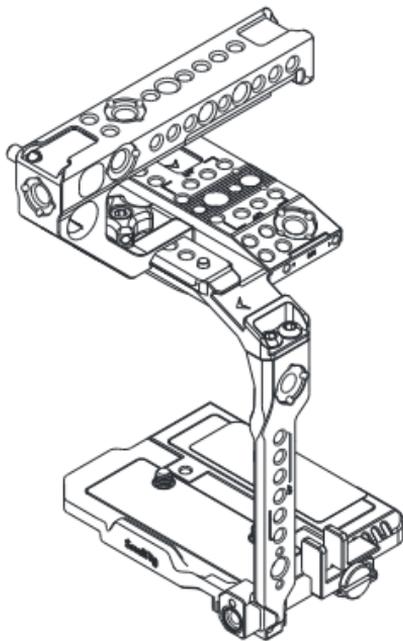

Handheld Kit for Canon EOS C70


User Manual

Thank you for purchasing SmallRig's product.


Warnings

- Please read this User Manual carefully.
- Please heed all warnings and follow all instructions in the owner's manual.


In the Box

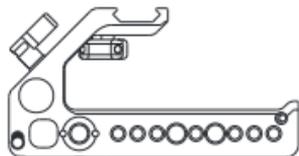

① Handle × 1

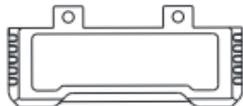

② Detachable Extended Baseplate × 1

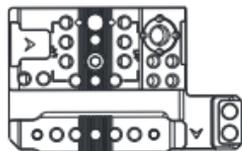


③ Top Plate × 1



④ Side Plate × 1



⑤ Cable Clamp × 1

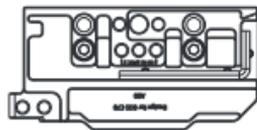

⑥ Baseplate × 1




⑦ 1/4"-20 Screw (long) × 2



⑧ 1/4"-20 Screw (short) × 4




⑨ User Manual × 1

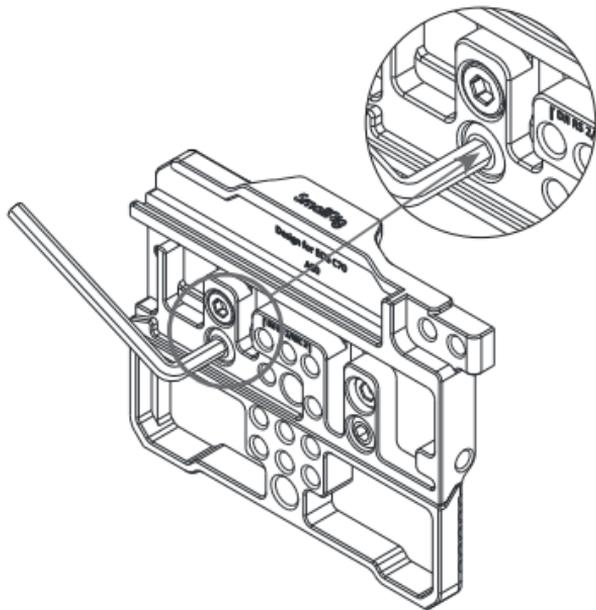

01

Detachable Extended Baseplate[®] Installation:


Install the baseplate[®] and the detachable extended baseplate[®] by tightening the two 1/4"-20 screws[®].

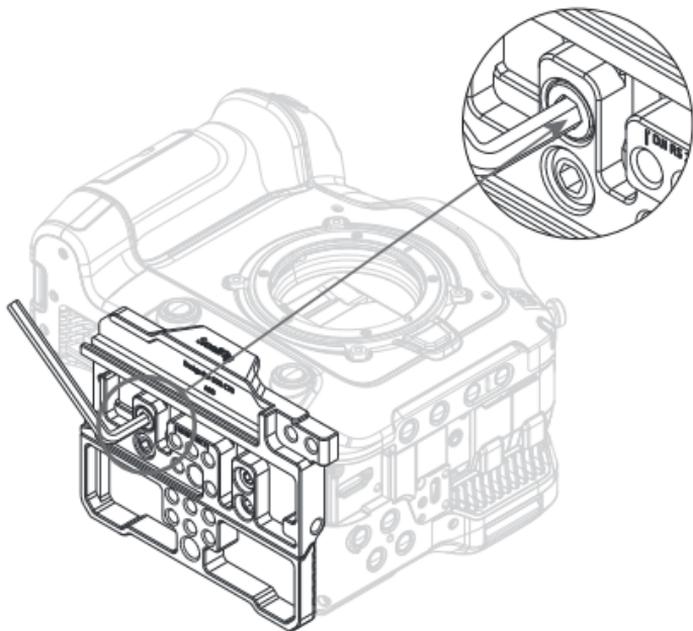

02


Baseplate® Installation:

Attach to the camera bottom by tightening the two 1/4"-20 screws.

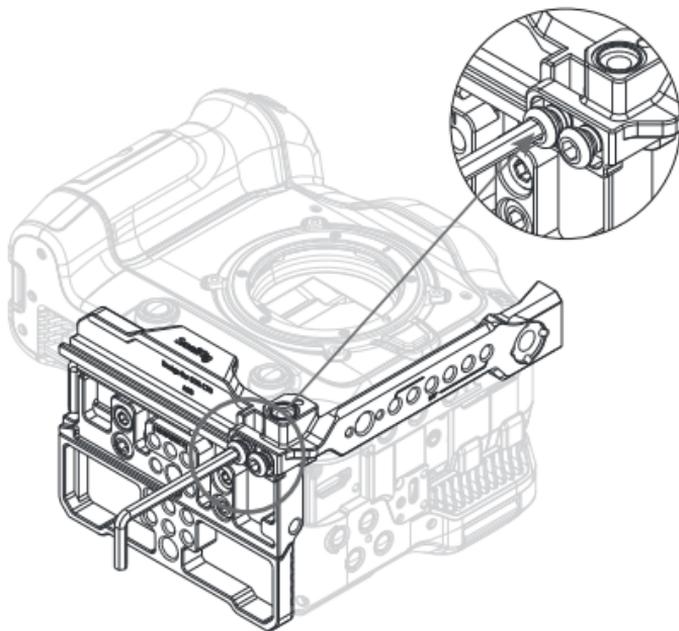


03 / Side Plate[®] Installation:

Attach the side plate[®] and baseplate[®] by tightening the two 1/4"-20 screws[®].

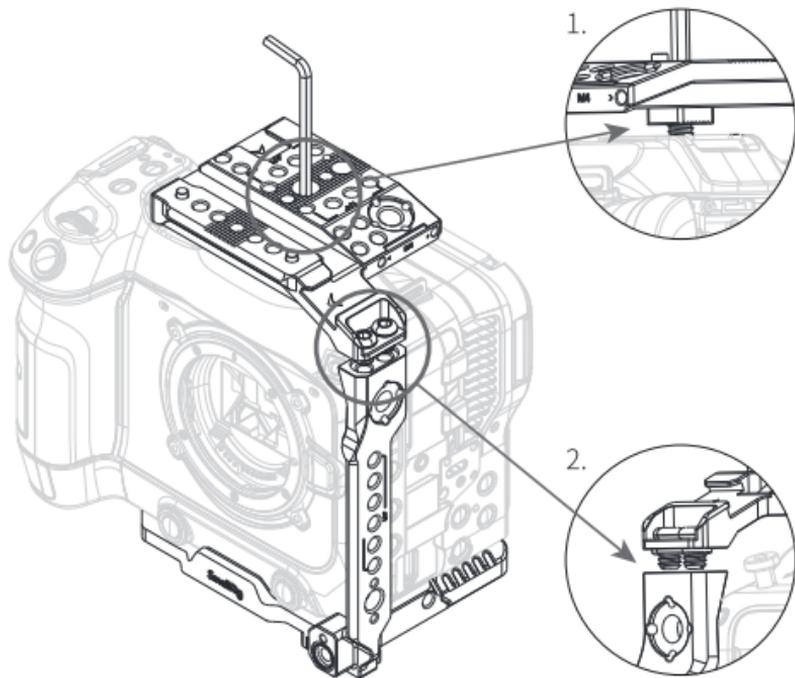


04 / Top Plate³ Installation:

1. Tightening 1/4"-20 screw after locating the top plate³ with the hot shoe of the camera.
2. Install the side plate⁴ and top plate³ by tightening the two 1/4"-20 screws².

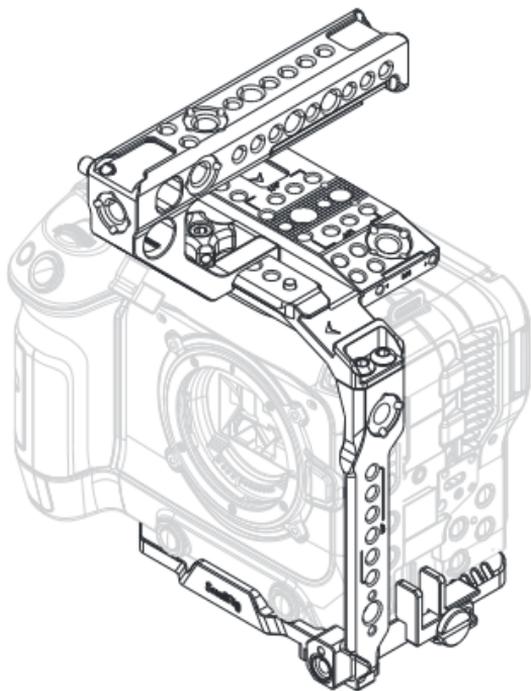

05


Install handle[®] and cable clamp[®].

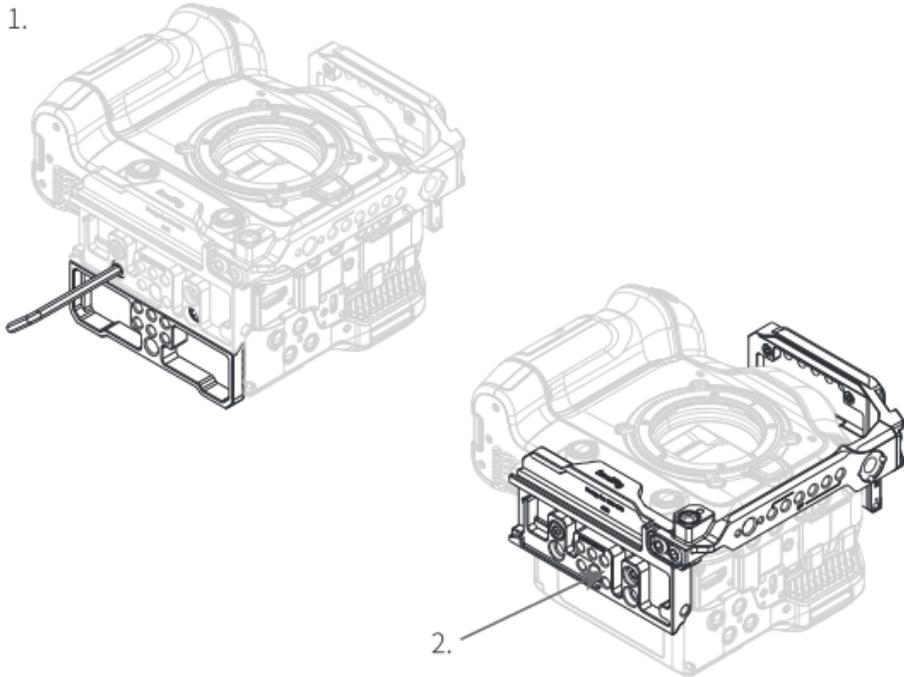

1. Please remove the extended baseplate² before mounting into DJI RS 2 / RSC 2.

2. The Arca-Swiss baseplate[®] supports DJI RS 2 / RSC 2 stabilizer.

SmallRig

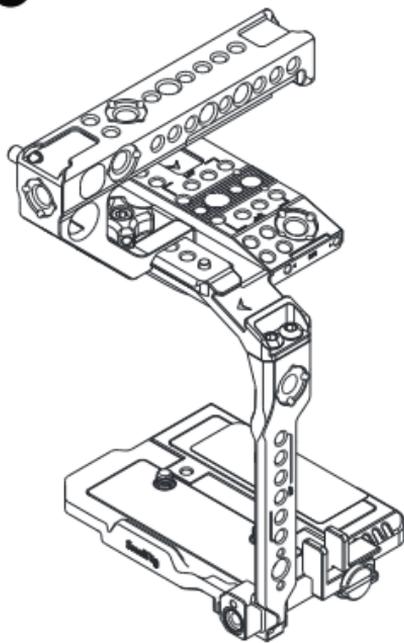

佳能 EOS C70 手持套件


用户手册

感谢您购买 SmallRig 产品。


重要提示

- 使用本产品之前，请仔细阅读用户手册。
- 请注意所有警告提示并遵循使用用户手册内的所有指令。


包装清单

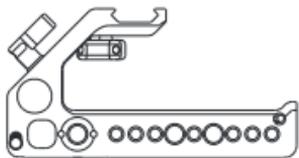

① 手柄 ×1

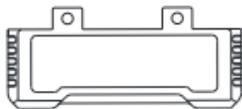

② 拓展底板 ×1

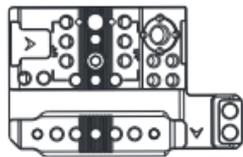


③ 顶板 ×1



④ 侧板 ×1



⑤ 线夹 ×1

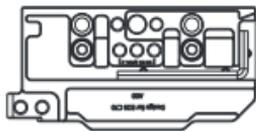

⑥ 底板 ×1




⑦ 1/4"-20 螺丝 (长) ×2



⑧ 1/4"-20 螺丝 (短) ×4




⑨ 用户手册 ×1

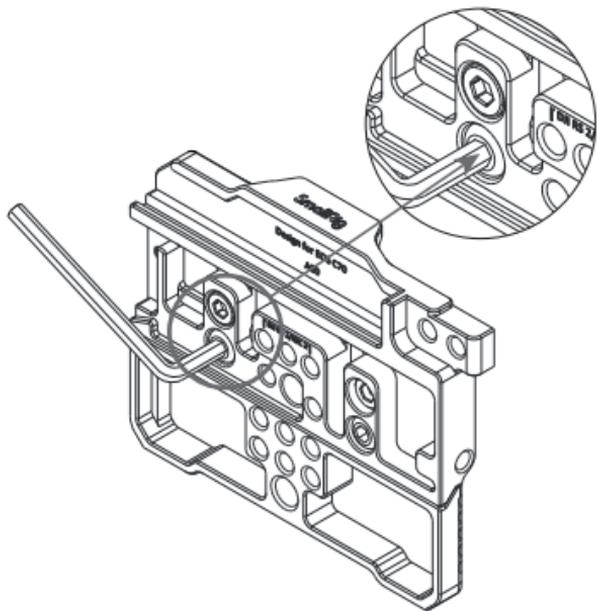

01

拓展底板^②安装：


通过两颗1/4"-20螺丝^③连接拓展底板^②和底板^①。

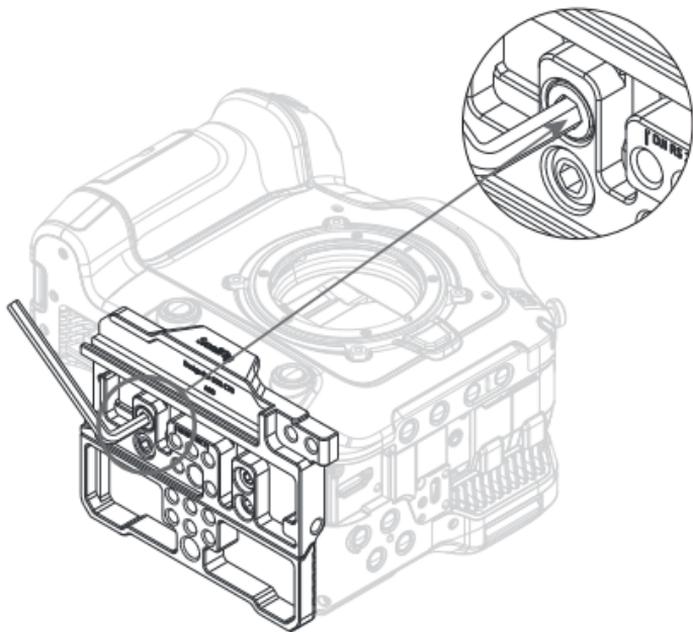

02 /

底板[®]安装:


通过两颗1/4"-20螺丝连接相机底部。

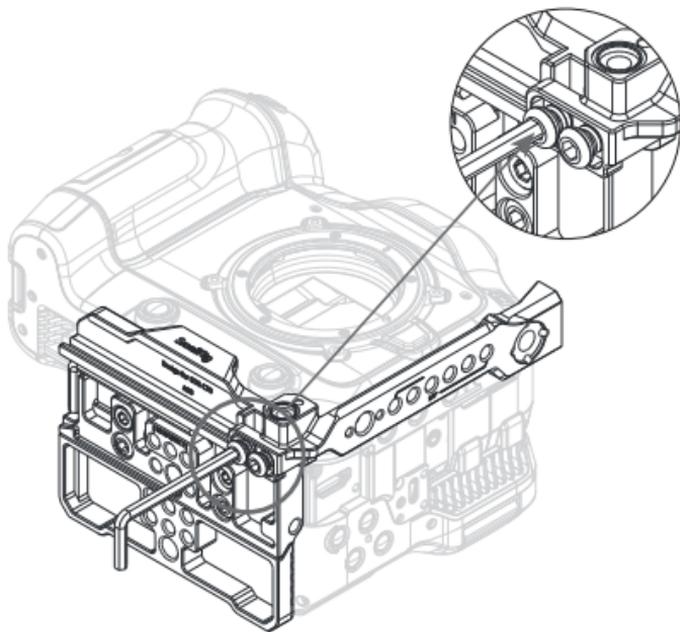

03


侧板[®] 安装:

通过两颗1/4"-20螺丝[®] 连接侧板[®] 和底板[®]。

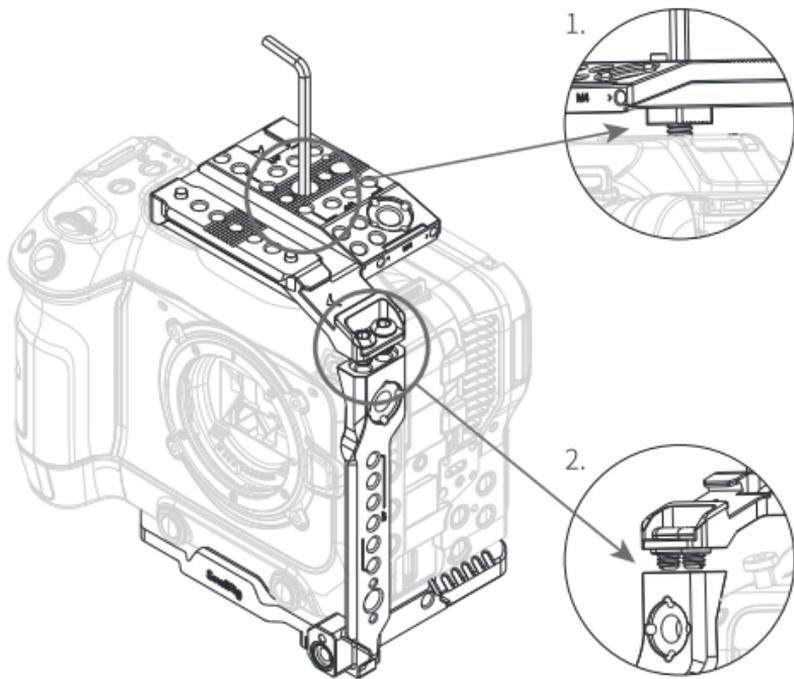


04

- 顶板^③安装：1. 将顶板^③对准机身热靴定位槽后，拧紧1/4"-20螺丝；
2. 通过两颗1/4"-20螺丝^⑦连接侧板^④和顶板^③。

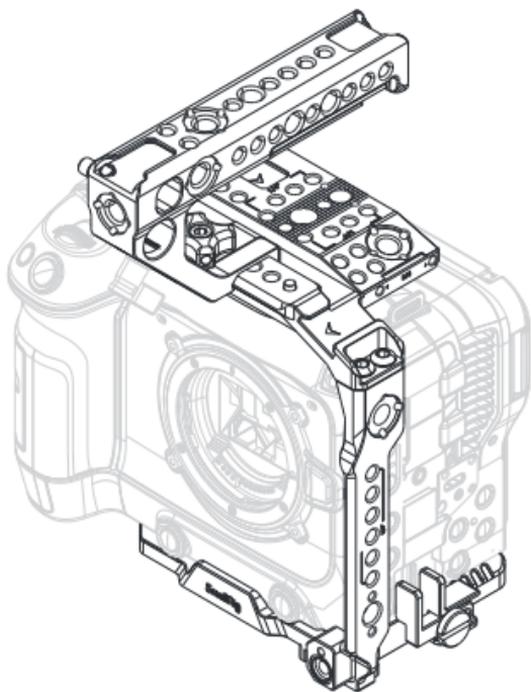

05

安装手柄^①和线夹^⑤。

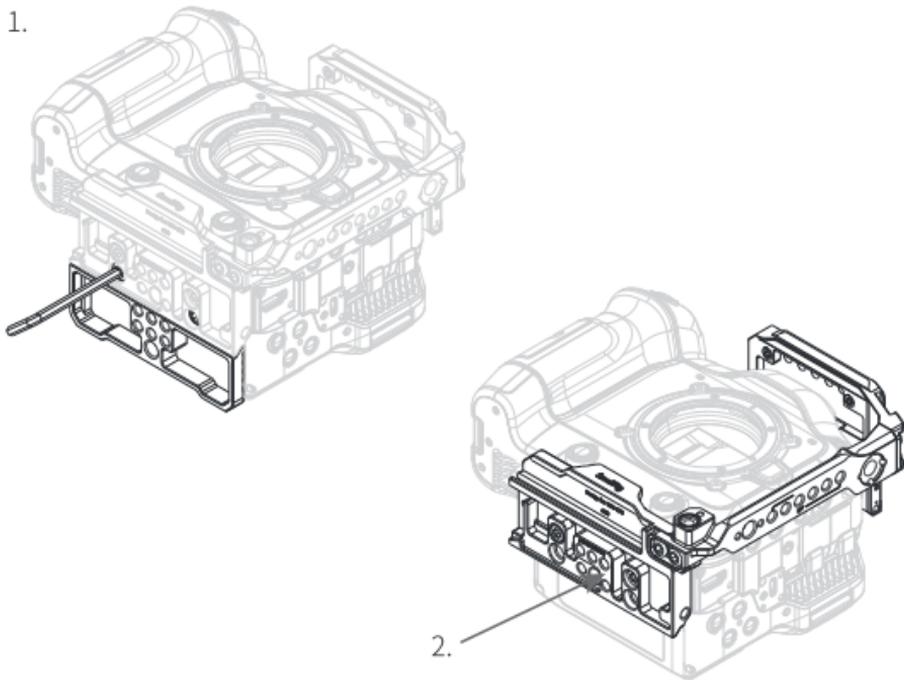

1. 使用DJI RS 2 / RSC 2稳定器前，需先拆卸拓展底板^②。
2. 底板^①内置阿卡快装板，可兼容DJI RS 2 / RSC 2稳定器。