


SmallRig

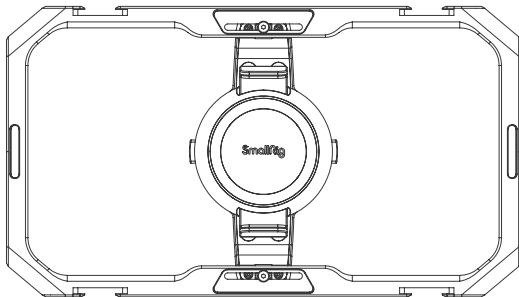

Universal Quick Release Cage for Mobile Phone


User Manual

Thank you for purchasing SmallRig's product.

In the Box

Universal Quick Release Cage	× 1	Allen Wrench	× 1
User Manual	× 1		

Product Details

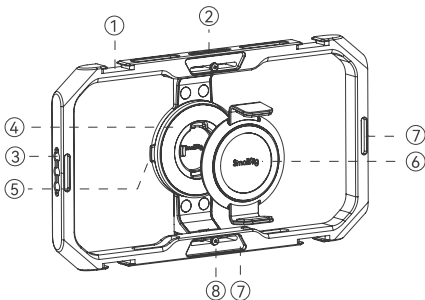

- | | | |
|-------------------------|-----------------|------------------------------------|
| ① Cold Shoe Mount | ④ MagSafe Base | ⑦ Quick Release Slot |
| ② 1/4"-20 Threaded Hole | ⑤ Unlock Button | ⑧ Clamping Column Adjustable Screw |
| ③ 1/4"-20 Threaded Hole | ⑥ Phone Clip | |

Functions

Extendable Function


There are three standard 1/4"-20 Threaded Holes②③ on each side of the cage for extending side handles, top handles and tripods with 1/4"-20 screws. There are two standard Cold Shoe Mounts① on the upper and lower sides of the cage, which are used to extend the light, microphone and other equipment with the cold shoe.

Quick Release

The Quick Release Slot⑦ are designed to work in conjunction with the 1/4"-20 threaded holes on the cage, allowing for the expansion of SmallRig's unique quick release ecosystem.

Quick Release Lock

As shown in the diagram below, align the Locating Pins ⑨ on the Quick Release Adapter ⑩ with the upper and lower 1/4"-20 threaded holes on the cage, and press the side handle (Note: Do not need to press the Unlock Button ⑪ simultaneously) until the Quick Release Lock ⑫ makes a sound, indicating that the side handle has been successfully locked into the cage.

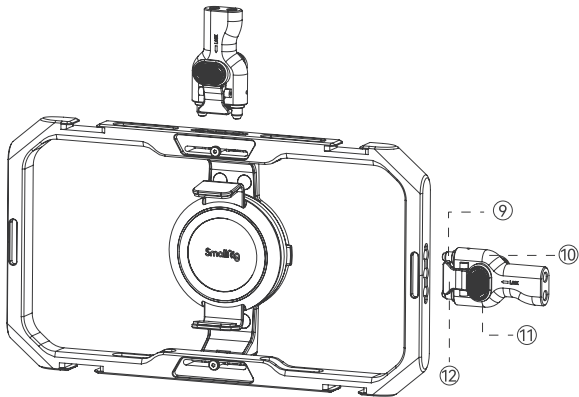

Note: the Quick Release Adapter need to be purchased separately

Quick Release Unlock

Press the Unlock Button⑪ on both sides to release the Quick Release Adapter.

Attach the Phone

Apple phones with MagSafe feature can be attached directly to the Magsafe Base ④ of the Cage for static shooting scenarios; When using a mobile phone without magnetic function, or shooting intense scenes, you need to fix the mobile phone on the Phone Clip⑥ first, then align the Phone Clip with the circular base, attach it, and press until you hear a sound, indicating that the Phone Clip has been successfully locked into the cage. When unlocking, press the Unlock Buttons⑤ on both sides and pull out the Phone Clip firmly to release.

Note: Please do not use the MagSafe function when shooting intense scenes

Adaptation for Mobile Phones

When adapting to different models of mobile phones, in order to ensure that the mobile phone buttons are not blocked and the phone is always in the center of the cage, you can use the Allen Wrench supplied with the product to loosen the Adjustment Screw⑧ and slide the clamping column left and right until the mobile phone is centered and the Phone Clip does not cover the mobile phone buttons.

Specifications

Product Dimensions	216 × 122 × 32.5mm
Product Weight	225 ± 5g
Material(s)	Aluminum Alloy, PC, Silicone